


USE THIS CHART FOR DETERMINING NUMBER OF SPRINGS, SPACING OF CLIPS AND SIZE OF PAPER COVERED STABILIZER WIRE FOR LOOSE CUSHION SEAT

Space springs on frame by first positioning the two outside strands. Spacing is calculated from center to center of clips.

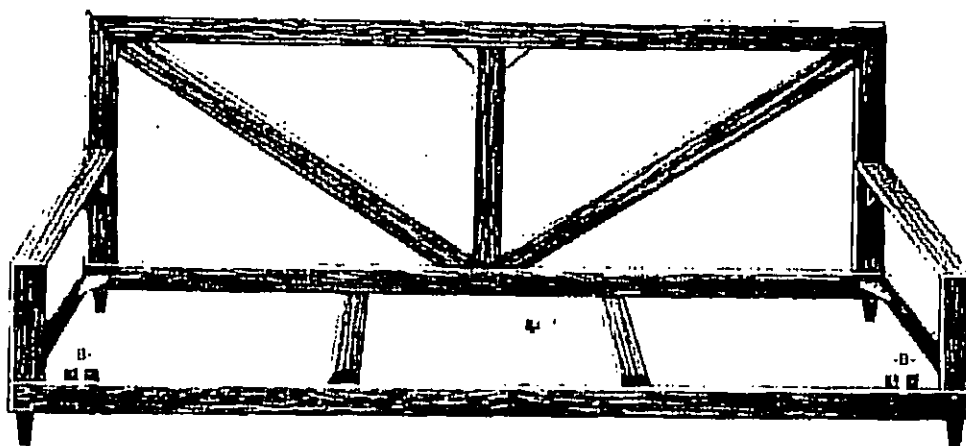

Distance Between Arms Along Front Seat Rail	Number of Strands	Center to Center Spacing of Clips	Center Spacing of Two Outside Clips From Inside Arm Posts	Dim. B	Paper Covered Wire Cross Brace Main Span
NO-SAG®					
48"	10	5-1/2"	1-3/4"	3"	46-1/2"
52"	11	5-1/4"	1-3/4"	3-1/4"	50-1/2"
72"	15	5-1/4"	1-3/4"	2-3/4"	70-1/2"
78"	17	4-7/8"	1-3/4"	3-1/8"	76-1/2"
86"	18	5-1/8"	1-3/4"	2-13/16"	84-1/2"